



## Intelligent Design • Exceptional Value



Choose manual or thermostat control

### Radiant Heat

*Think cat on a windowsill!* Our radiant heaters project warmth into the room like sunlight through a window. Ideal for any supplemental heat application.

- 99.9% Efficiency - Turns more gas into heat
- Available in LP and Natural gas
- Pushbutton piezo ignition and standing pilot
- Heats even when electric power fails
- Oxygen Depletion Sensor shuts off heater before oxygen drops to unsafe level
- Every heater is test-fired at the factory to check ODS
- Wall-mount or floor stand
- Three-year limited warranty on parts and labor

Model	Btu	Natural Gas / LP	Controls	Dimensions (L x W x D)	Weight (lb)
HR06MN	6,000	N	Manual, on/off	19 1/4 x 14 5/8 x 5 5/8	15
HR06ML	6,000	LP	Manual, on/off	19 1/4 x 14 5/8 x 5 5/8	15
HR10MN	10,000	N	Manual 2-Settings	19 1/4 x 14 5/8 x 5 5/8	16
HR10ML	10,000	LP	Manual 2-Settings	19 1/4 x 14 5/8 x 5 5/8	16
HR18MN	18,000	N	Manual 3-Settings	23 1/2 x 19 1/2 x 7	25
HR15ML	15,000	LP	Manual 3-Settings	23 1/2 x 19 1/2 x 7	25
HR30MN	30,000	N	Manual 3-Settings	23 1/2 x 27 x 7	33
HR25ML	25,000	LP	Manual 3-Settings	23 1/2 x 27 x 7	35
HR10TN	10,000	N	Thermostat	23 1/2 x 27 x 7	16
HR10TL	10,000	LP	Thermostat	19 1/4 x 14 5/8 x 5 5/8	16
HR18TN	18,000	N	Thermostat	23 1/2 x 19 1/2 x 7	35
HR15TL	15,000	LP	Thermostat	23 1/2 x 19 1/2 x 7	33
HR30TN	30,000	N	Thermostat	23 1/2 x 27 x 7	33
HR25TL	25,000	LP	Thermostat	23 1/2 x 27 x 7	35

HearthRite is committed to continuous product improvement. Specifications are subject to change without notice.

### Accessories

Model	Description	Part Number	Description
HAB01	Blower - Thermostat and Manual Control	HAS01	Floor Stand for HB06 and HB10 Models
		HAS02	Floor Stand for HB20 and HB30 Models



Blower



Floor Stand

Due to high temperatures, the appliance should be located out of traffic and away from furniture and draperies.

Children and adults should be alerted to the hazard of high surface temperature and should be kept away to avoid burns or clothing ignition.

Installation and repair should be done by a qualified service person.

When used without adequate combustion and ventilation air, heater may give off CARBON MONOXIDE, an odorless, poisonous gas.

These heaters have a pilot light safety system that turns the heater off if not enough fresh air is available. Do not tamper with this safety system. If the heater shuts off, do not re-light until you provide fresh air. If the heater keeps shutting off, have it

serviced. Keep the burner and control compartment clean.

Carbon monoxide poisoning may lead to death. Early signs of carbon monoxide poisoning resemble the flu, with headache, dizziness, and/or nausea. If you have these signs, the heater may not be working properly. Get fresh air at once and have the heater serviced.

Some people—pregnant women, persons with heart or lung disease, anemia, those under the influence of alcohol, those at high altitudes—are more affected by carbon monoxide than others.

These heaters are design certified in accordance with American National Standards Institute Z21.11.2a (latest standard) by the Canadian Standards Association as Unvented Room Heaters.

The installation must conform to local codes. In the absence of local codes, the installation must conform with American National Standard (National Fuel Gas Code) known as NFPA 54 and ANSI Z223.1 (latest edition) available from the American National Standards Institute, Inc., 11 West 42nd St., New York, N.Y. 10036, or from the National Fire Protection Association, Batterymarch Park, Quincy, Massachusetts 02269.



# HearthRite

A Division of Empire Comfort Systems, Inc.  
918 Freeburg Avenue  
Belleville, IL 62220

Phone : 618-233-7420 or 800-851-3153  
Fax : 618-233-7097 or 800-443-8648