




ACEDIY12HP110/ACCDIY12HP110

## Wiring Guide for AmericAire DIY

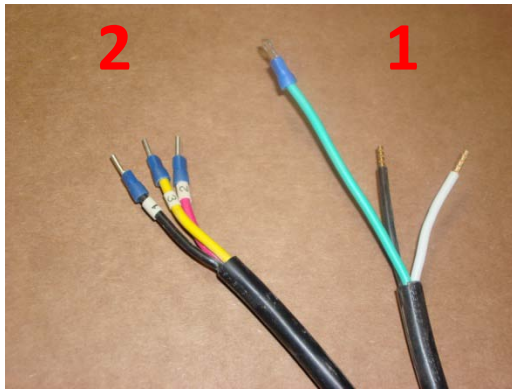

Each AmericAire DIY system comes with two sets of 14-gauge wiring and an optional thermostat.

1. 25-Feet of wire from the electrical box to the outdoor condenser or disconnect box.
2. 25-Feet to connect the outdoor condenser to the indoor evaporator.

*A wired thermostat is supplied and can be connected with the quick-connect plug. A 20 Amp dedicated circuit breaker is required for installation.*



### **Wiring Condenser to Evaporator**

- 1. RED to RED**
- 2. WHITE to WHITE**
- 3. BLACK to BLACK**

### **Wiring Disconnect Box to Condenser**

- 1. GREEN to GREEN (Ground)**
- 2. BLUE to WHITE**
- 3. BLACK to RED**

**If you have any questions please**

**contact technical support at**

**(800) 961-7123**

